




1
Finished opening for the floor hatch

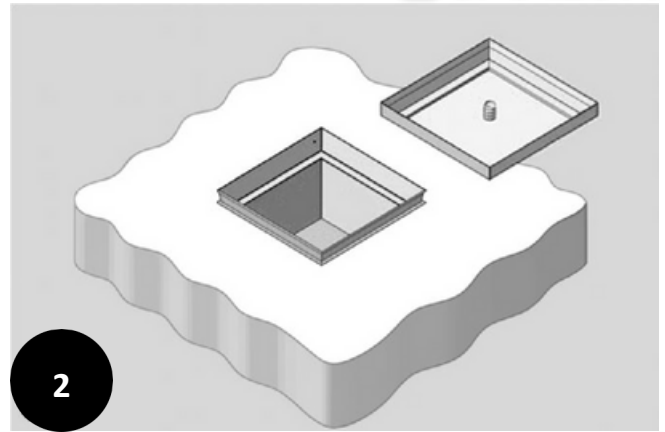


2
Install the outer frame of the hatch in the opening

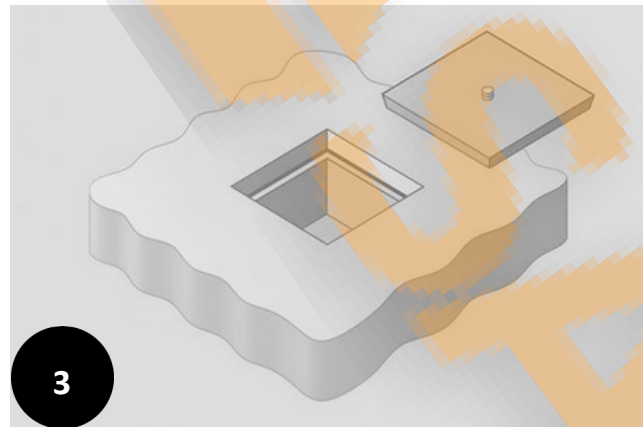


3
Concrete up to the top edge of the outer frame and fill the manhole cover with mortar

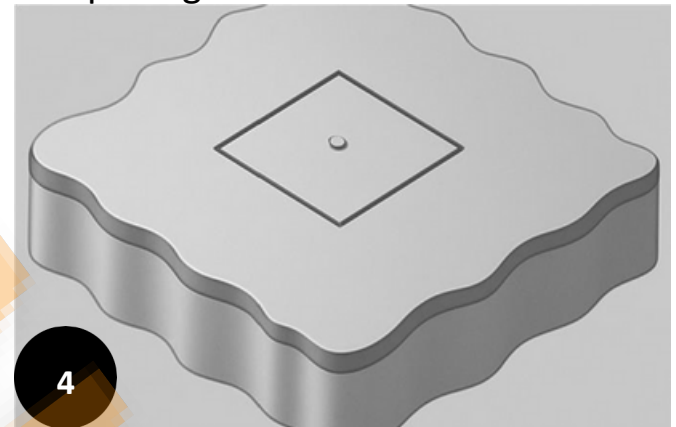

4
Wait until the mortar has completely dried.

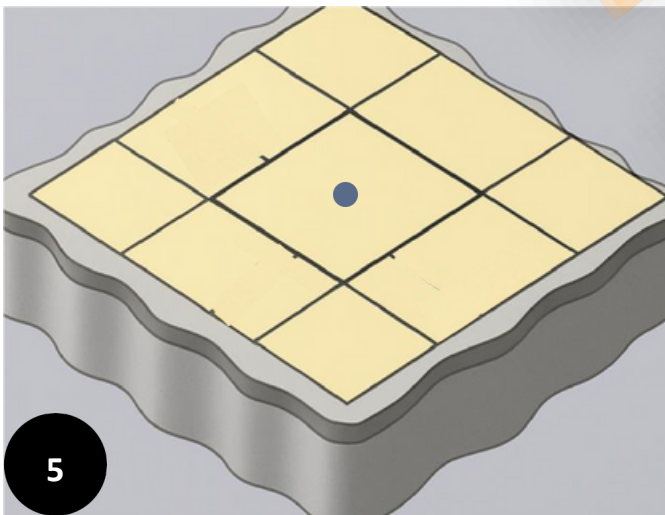

5
Lay floor tiles

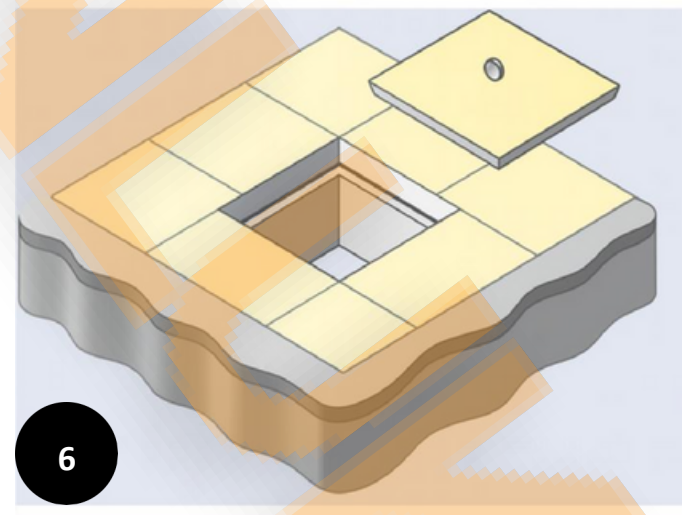

6
Your hatch is ready!

